


CHROMAWERX QUADRO - RGBW

OUADRO DMX SPECIFICATION

A qualified DMX integrator is required to assure proper installation and commissioning of the DMX network. When placing the PO, please provide the contact information of your DMX integrator.

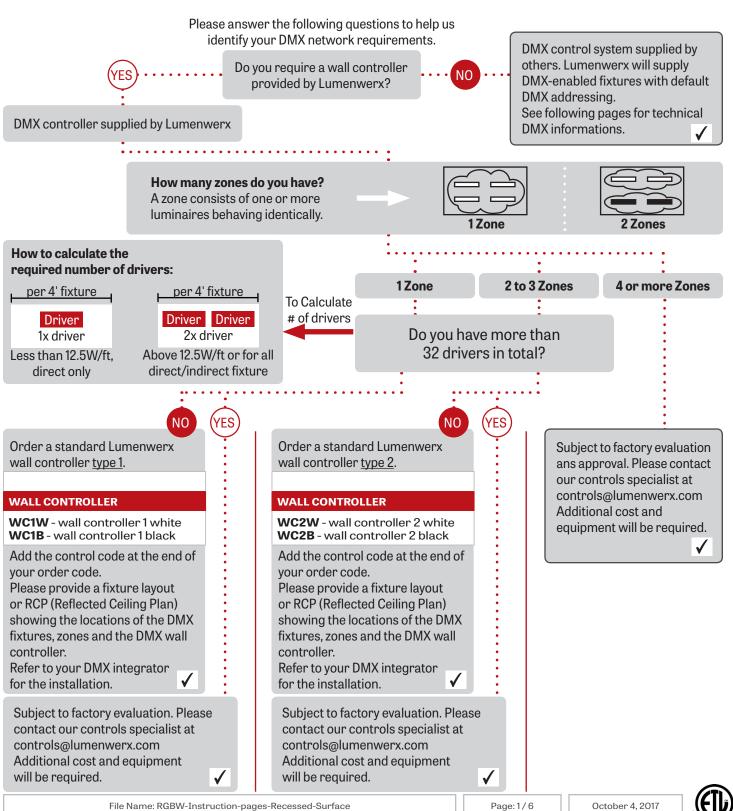




Page: 1/6



CHROMAWERX QUADRO - RGBW

GENERIC DMX NETWORK ARCHITECTURE

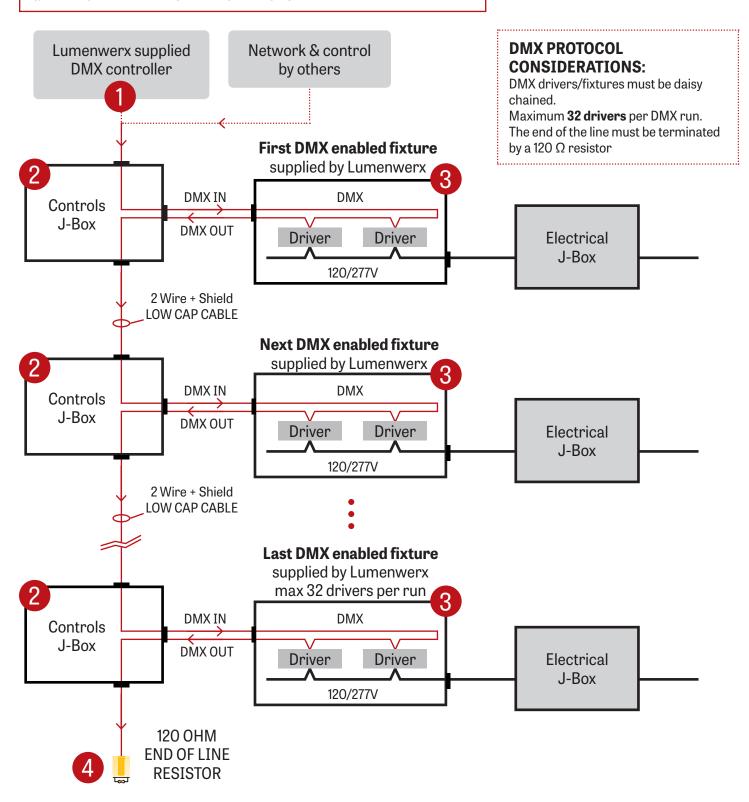






CHROMAWERX QUADRO - RGBW

1

LUMENWERX SUPPLIED DMX CONTROLLER

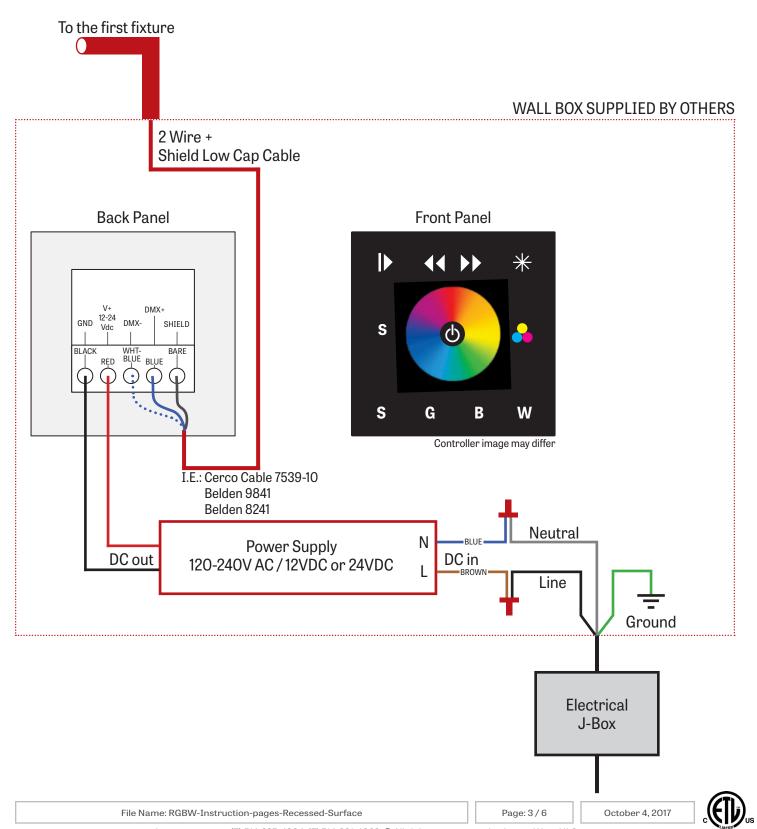




CHROMAWERX QUADRO - RGBW

2

J-BOX DMX DAISY CHAIN DETAIL

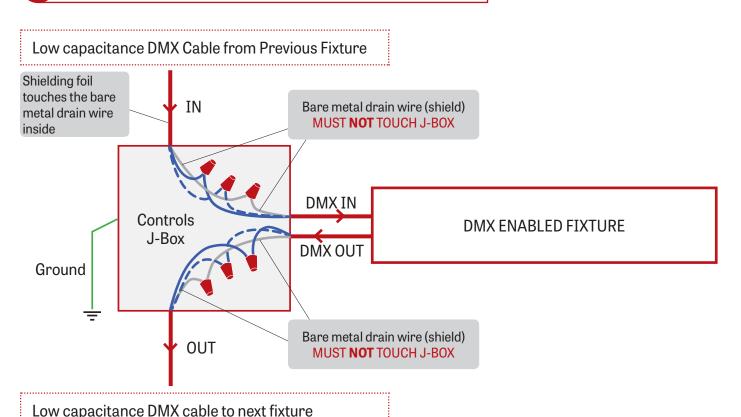

3 DMX CONNECTION RECESSED & SURFACE



 ${\it File Name: RGBW-Instruction-pages-Recessed-Surface}$

Page: 4/6


October 4, 2017





CHROMAWERX QUADRO - RGBW

DMX LAST FIXTURE DETAIL

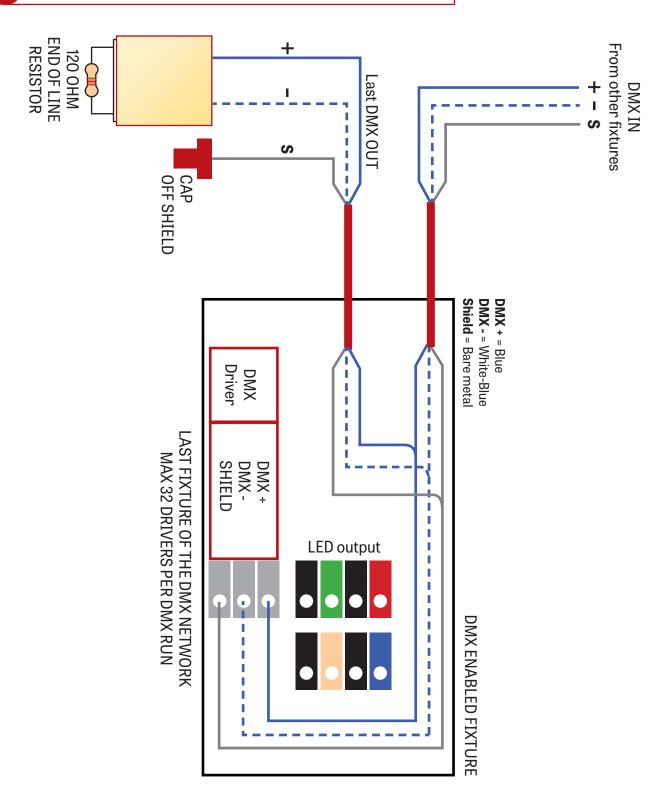






CHROMAWERX QUADRO - RGBW

DMX WALL CONTROLLER

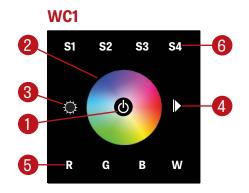

(1) Power: Use this button to turn ON or OFF the RGBW fixture

(2) Color Wheel: The wheel is used to rapidly select a color

(3) Brightness (RGB): Hold down this button to either increase or decrease the

brightness of the current RGB selection. White will not be

affected by the RGB brightness button.

(4) Color Cycle: This button will start an animation, rotating between Reds

Greens and Blues, the arrows allows the user to speed up or

slow down the animation

(5) Individual Colors: By pressing and holding a color it will be possible to brighten or

dim it. Quickly pressing a color will turn it OFF or turn it ON to

it's previous dim level.


White: In Order to activate or deactivate and dim the White

channel, the White button needs to be used.

(6) Scenes: By holding down one of the scenes button, the current color

selection is saved. It can be later accessed by quickly pressing

on one of the Scene buttons.

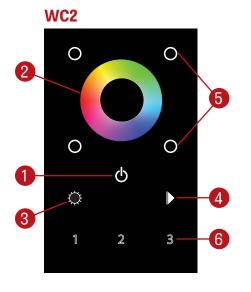

(1) Power: Use this button to turn ON or OFF the RGBW fixture

(2) Color Wheel: The wheel is used to rapidly select a color

(3) Brightness: Hold down this button to either increase or decrease the

brightness of the current RGB selection. White will not be

affected by the RGB brightness button.

(4) Color Cycle: This button will start an animation, rotating between Reds

Greens and Blues, the arrows allows the user to speed up or

slow down the animation

(5) Individual Colors: By pressing a color it will be possible to brighten or dim that

specific color White: In Order to activate or deactivate and dim

the White channel, the White button needs to be used.

(6) Zone: By holding down one of the zone button, a zone can be selected

and control

Default DMX Addresses:

1 Red

2 Green

3 Blue

4 White

File Name: RGBW-Instruction-pages-Recessed-Surface

Page: 6 / 6

October 4, 2017

